

QUICK FOLD SCREEN

USER MANUAL



TO THE OWNER

Thank you for purchasing our quick fold screen. This product is comprised of durable matte white fabric and mechanical components to give you trouble free enjoyment for years.

Please take a moment to read this user guide before assembly or installation.

REMARK

Surface can be cleaned as follows:

1. Using a white clean cloth(100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circulate motion. Using a dry 100% cotton cloth, wipe dry after each cleaning and before folding and storing.

2. To clean a stubborn stain or sticky surface, use denatured alcohol(methanol or methyl alcohol) following the same procedure as for water.

 

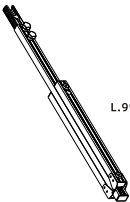






 
 

 **The projection surface has to be folded with the front layer inside, in order to avoid soil and damage.**

NOTE: Please store the screen fabric into the separate soft pouch to avoid any damage, failure to observe those normal precautions may cause discolorations of the material.

ATTENTION!! WHEN YOU SEE A "  WARNING!" BE SURE TO HEED THE MESSAGE!

 **Be sure to use the screen only during a light breeze(up to 7mph); it's not meant to withstand heavy winds.**

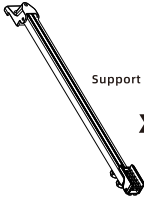PARTS


 <p>Frame</p> <p>X1</p>	 <p>Screen</p> <p>X1</p>	 <p>Leg L.99.01.0001.0</p> <p>X2</p>	 <p>Short Knob Screw S.09.02.0002.2</p> <p>X2</p>
 <p>Leg Knob Screw</p> <p>X2</p>	 <p>Support Brace</p> <p>X2</p>	 <p>Eye-Bolt B.99.10.0615.8</p> <p>X2</p>	 <p>Rope F.02.99.0007.0</p> <p>X1</p>
 <p>Ground Stake J.97.12.00012.6</p> <p>X8</p>	 <p>Carry Bag</p> <p>X1</p>	 <p>SERVICE CARD</p> <p>X1</p>	 <p>MANUAL</p> <p>X1</p>

⚠ Please make sure all parts are included in your package before proceeding to assemble fast fold screen.

SET UP

Step 1


Unfold the frame following the directions given below so that it's lying flat, Snap latches will automatically lock(Picture 1)

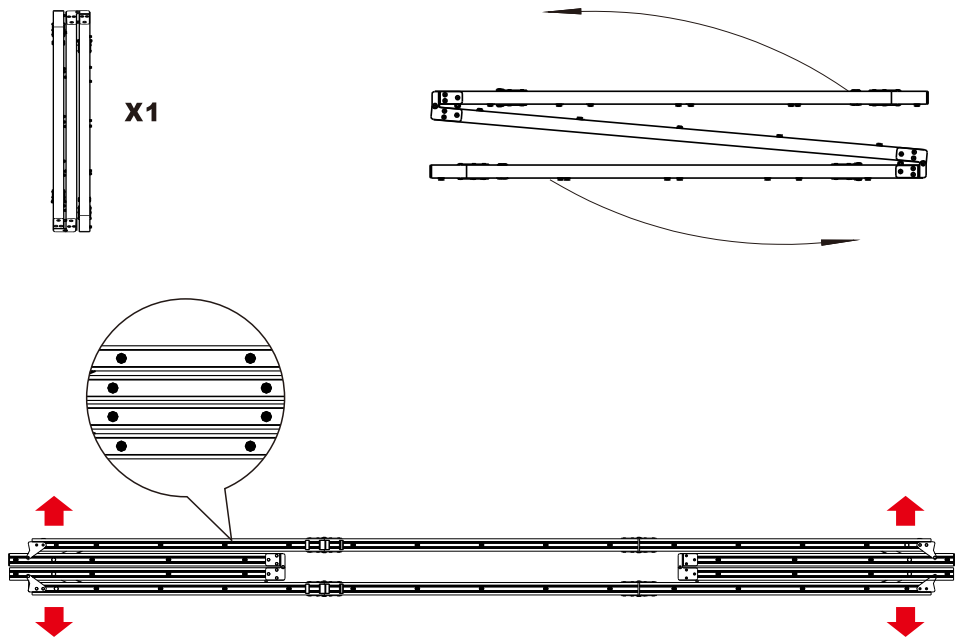


Picture 1

Step 2

While holding the bottom of the frame in place, lift the top of the frame to unfold the sides, lock down all four corner braces.(Picture 2)

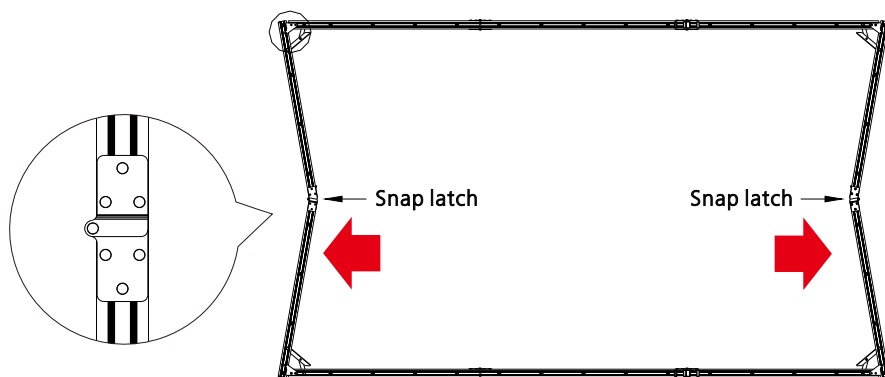

Picture 2

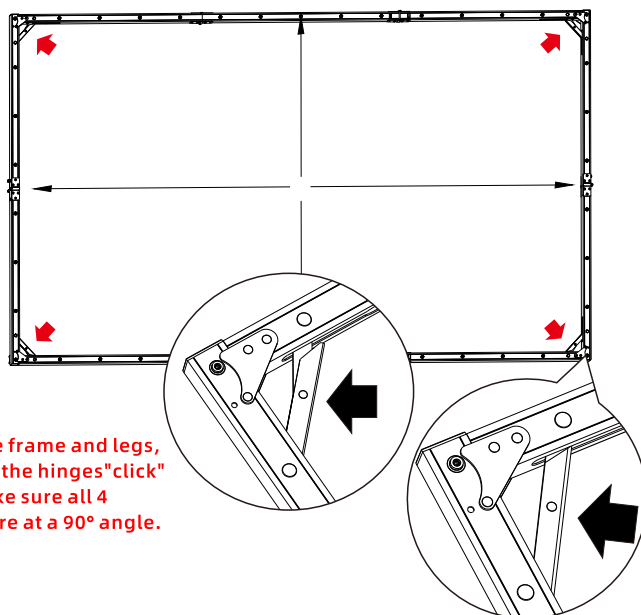


⚠ when unfolding the frame and legs, be sure the latches on the hinges "click" into place. Please make sure all 4 corners of the frame are at a 90° angle.

Step 3

Lay out the screen on the frame, fix four buttons of corner to the frame.
Press on the projection surface by starting at one corner and fasten the buttons clockwise.



X1

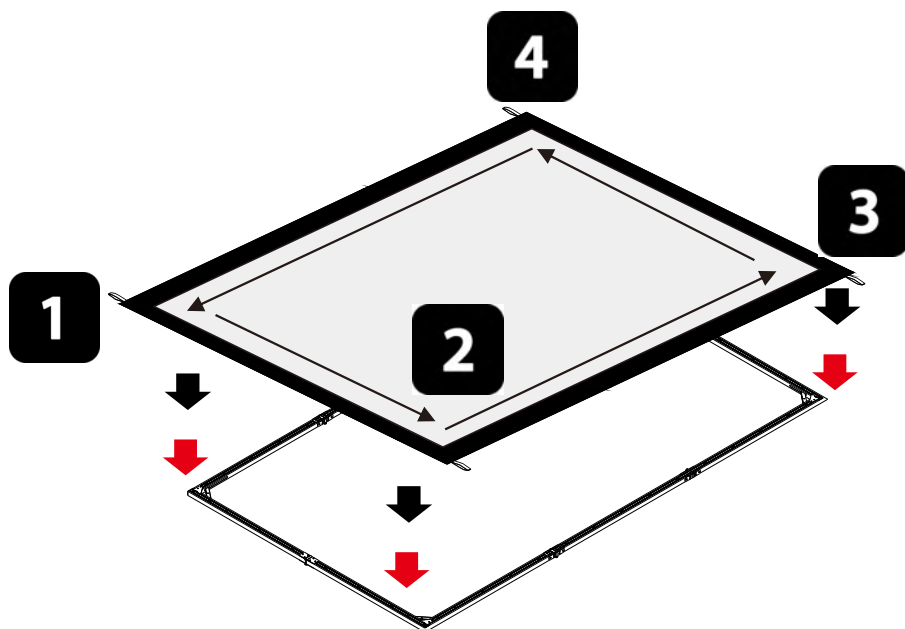

Step 4




 **Ensure there is no peaked and hard object under the fabric.**

Flip over the frame

Connect the frame with legs, unfold legs and lift the screen up.


Adjust the height to a Ideal positions then tighten the locking knobs.

*Legs Extend from 33.5" to 54" actual full height is 58" from floor to viewing surface (standard leg height is 26.5" included with screen)

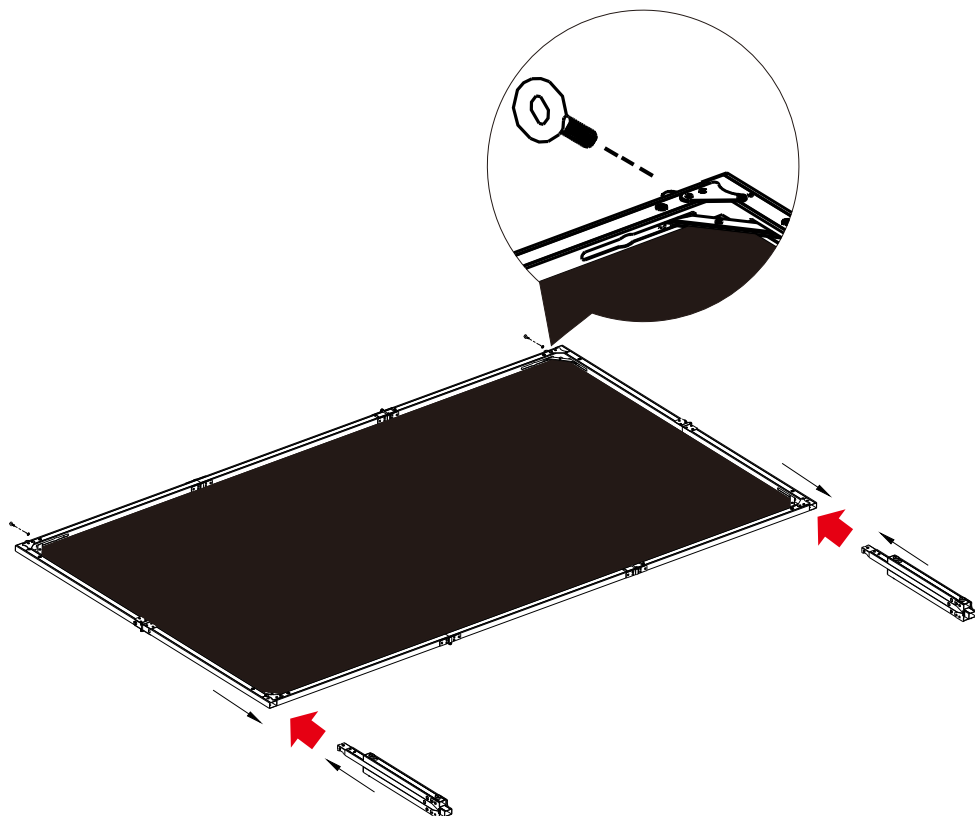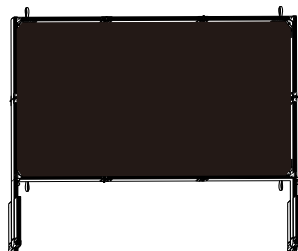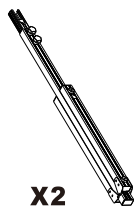

Step 5


Unfold legs and lift the screen up
Adjust the height to a Ideal positions then tighten the locking knobs. Move on to Step 7.
*Legs Extend from 33.5" to 54" actual full height is 58" from floor to viewing surface (standard leg height is 26.5" included with screen)

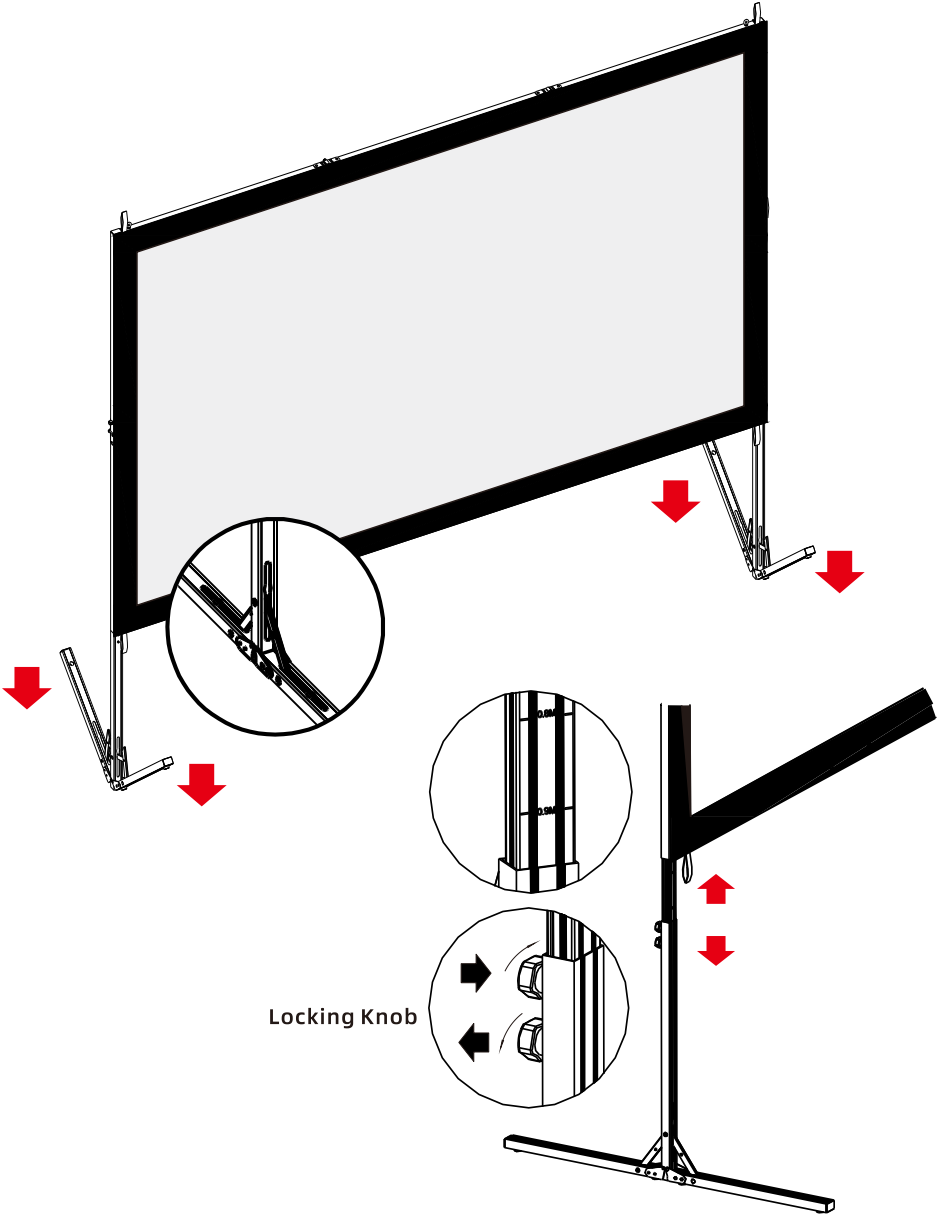

Step 6


Attach the support brace from the back with the LEG KNOB SCREW.

Loosen the locking knobs on the support brace, adjust the length to position, lock down SHORT KNOB SCREWS securely before tighten the locking knobs.

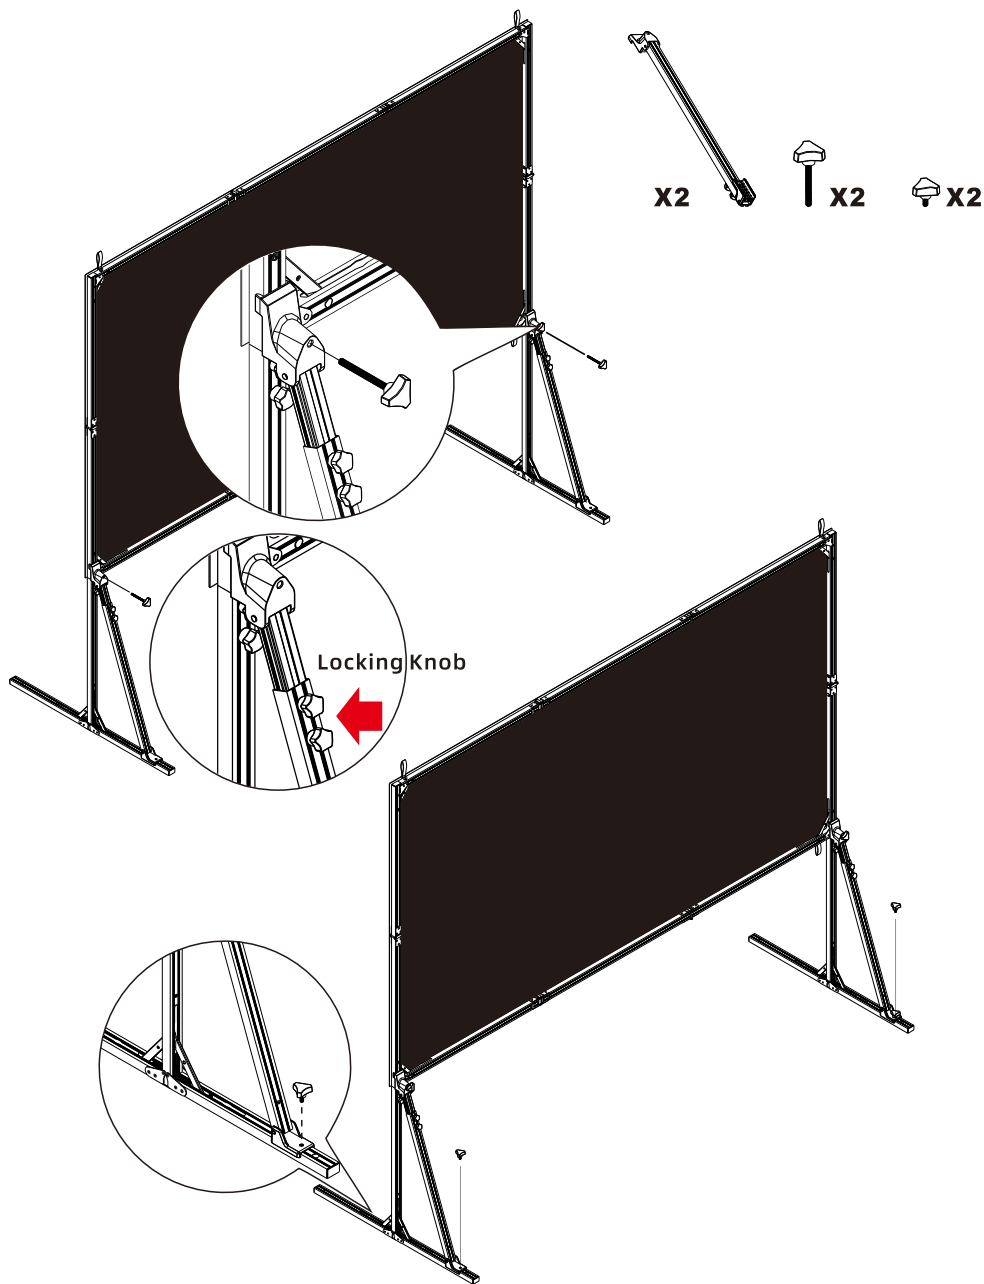



Step 7

Under special circumstance(as out of flatness on earth or strong wind), insert the ground stakes into the ground to enhance the stability of screen.

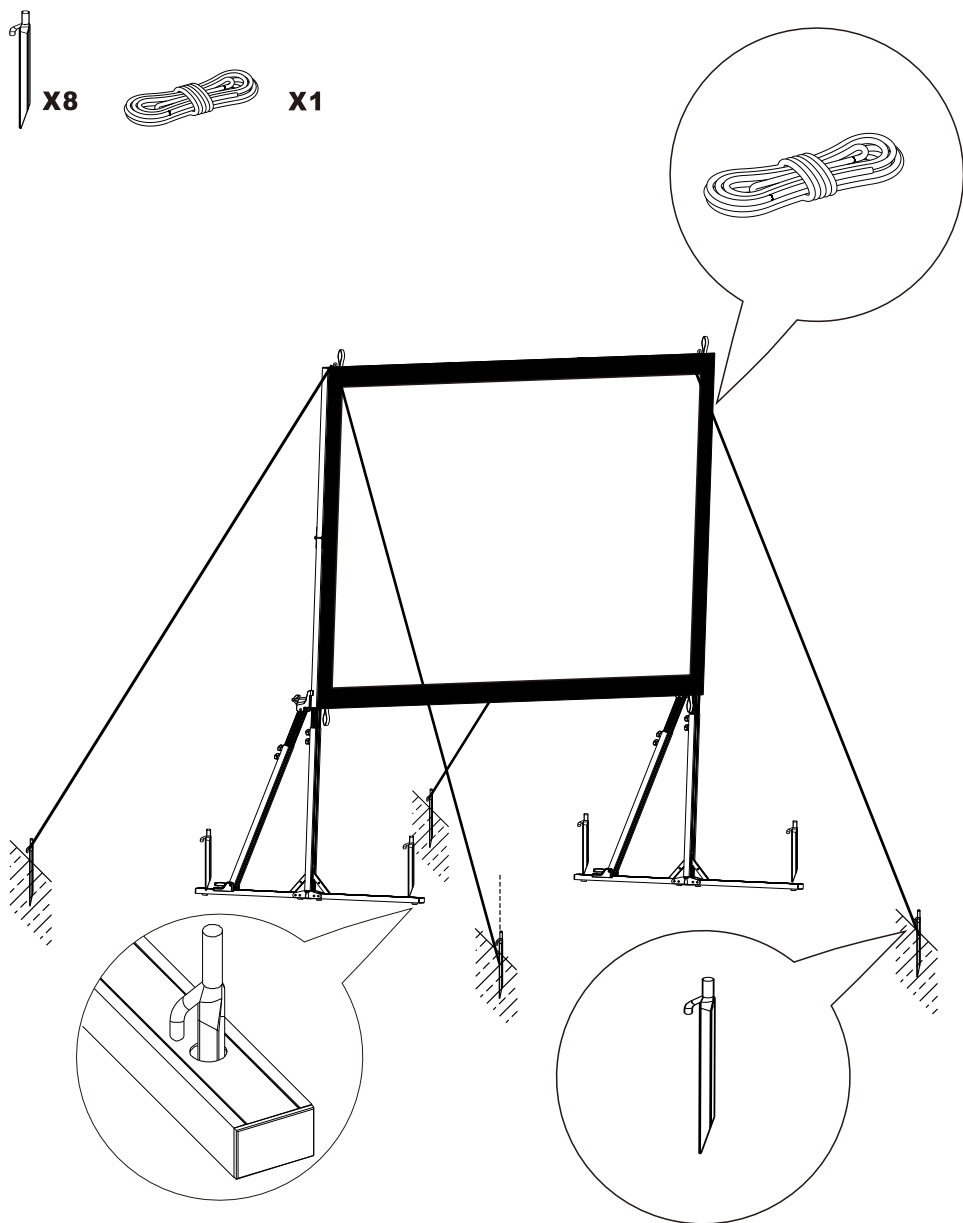


BREAK DOWN

- 1.Unlock the shear joints and telescopic leg supports, lay frame flat on an even surface.
- 2.Remove fabric
- 3.Unscrew knobs turn it counterclockwise and remove leg pieces.

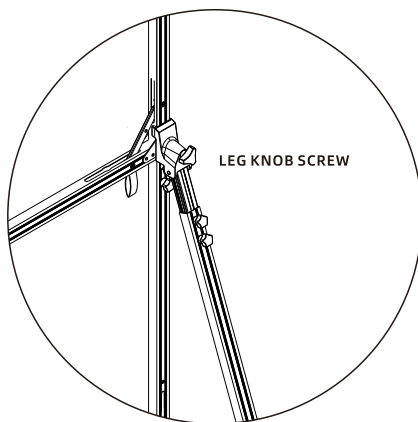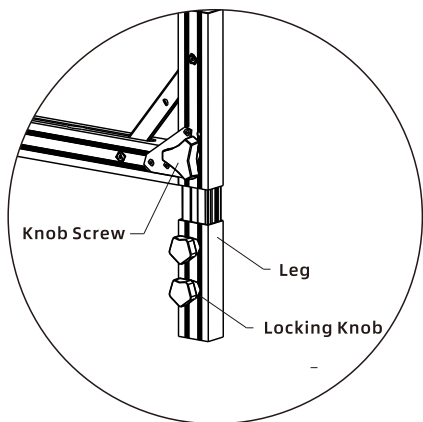

4. To break down the screen frame, unlock all four corner braces. Push the SNAP LATCH button(see below)and fold the frame.

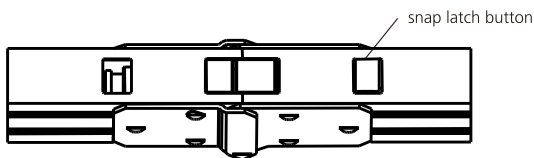

FOLDING THE FABRIC FOR STORING

When folding the screen material for packing, observe the following precautions before proceeding:


- 1.The surface should not be allowed to contact painted, varnished or plastic finished objects for prolonged period of time.
2. Make certain the fabric is on a clean flat surface.

Place clean white tissue paper with no printing on top of the white viewing surface area. If tissue is not available, a soft white cloth or something similar will serve the same purpose. under no circumstances should newspaper or anything similar be used as these may damage the screen material.

1. With the white viewing side facing up, fold the fabric in half from top to bottom. Make certain when folding that the surface does not come in contact with either the black binding, grommets or snap buttons.
- 2.Fold material from left to right and continue folding until the fabric of sufficient size to fit into the leather pouch.

20200901

 www.samsav.com

 services@samsav.cn