

## Synchronization Trigger

### USER MANUAL



▲ Please take a moment to read the user manual before use.

#### ① Safety Guide

1. Must be cut off the power supply before mounting.
2. Ensured the connections were solid after installed.


#### Product Figures

Effective distance: 20m  
Power supply: 90-240v  
Electric current: 20A  
Frequency: 868MHZ


#### Adjustment and Usage

##### Code Learning (with screen)

1. Connect the Synchronization Trigger with projector and power cable, then switch on.
2. Press the LEARNING KEY (on the cap) for 4s then loose. The screen will automatically going up and down once.

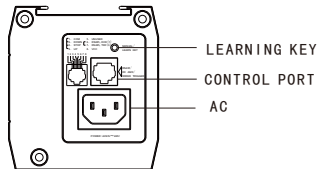

3. Press the SET KEY on the Synchronization Trigger, Screen automatically up and down once while the LED LIGHT flashing, code learning is complete.

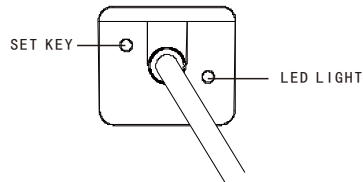

##### Deletion Code

1. Exchanged to new Synchronization need to code learning and memorized again with the same method mentioned above.
2. Press the LEARNING KEY over 7s, the screen will automatically up and donw twice. Then presses LEARNING KEY again, deletion is completely.

##### Memory Function (with projector)

1. Plug in the Synchronization trigger with projector and switch on.
2. Press the SET KEY till the LED LIGHT changed from green flashing to red flashing. Now learning is complete.

