

Motorized Ultra Short Throw (UST) Projector Shelf Manual



What's In The Box

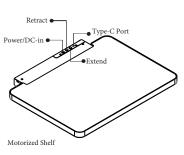

 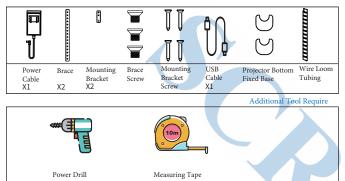






Installation

STEP 1
Choose the desired installation method, and use the Brace Screw to fix the Brace with the Mounting Bracket individually.
Attention: According to the installation method of the shelf, pay attention to the position of the screw hole of the Mounting Bracket.





STEP 2
Use screws to fix the Brace and the Shelf



 


Note: To make the Shelf extend further, you can adjust the position of the mounting holes of the Brace and the Shelf.

STEP 3

Use Mounting Bracket Screw to fix the Mounting Bracket to the desired location






STFP 4


Insert the USB Cable to connect the projector and the Shelf

 Insert Power Cable and make sure that there is no abnormality before turning on the power for use.




CTED 5

Turn on the projector (the shelf will be turned on synchronously), press the Extend/Retract key until the image size of the laser TV is appropriate, and Press both button until the light flash 3 times to record the current position

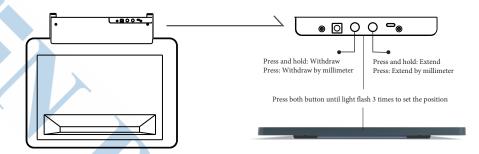

STEP 6

Attach the Projector Bottom Fixed Base to prevent the projector from slipping

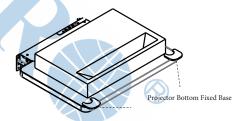

ATTENTION!

- 1. All items placed on the panel (laser TV) must be fixed before use.
- 2. When installing fixed products, please turn off the power to operate. Before use, check that there is no abnormality before turning on the power for use.
- 3. Since there are metal parts in the casing, it is required that the input power supply of the environment must have a grounding wire. The company is not responsible for safety accidents caused by ungrounded derivatives;
- 4. Non-professionals are strictly prohibited from disassembling the machine. If you encounter product failures, please contact the manufacturer's after-sales technicians to solve them.

www.samsav.com www.samsav.com