FIXED FRAME SCREEN USER MANUAL



CONTENT

Guidance	02-04
Suggested Projector Placement	02
Screen Care	04

7mm Frame

Parts List	05
Inner Frame Assembly	06
Black Backer Attachment	09
Fabric Attachment	10
Outer Frame Assembly	15
Wall Installation	15

05-17

19-26




60mm Fram	e	18-26
Parts	List	18
Frame	Assembly	20


90mm Frame

Parts List		
Frame Assembly	20	
Fabric Attachment	21	
Black Backing	23	
Support Bar Installation	25	
Wall Installation26		

GUIDANCE

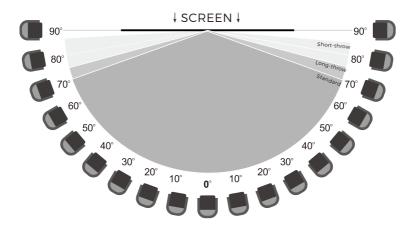

Short-throw screen user please pay attention to the direction of the screen. The screen will change according to the installation position of the projector. The recommended viewing distance is more than 2m

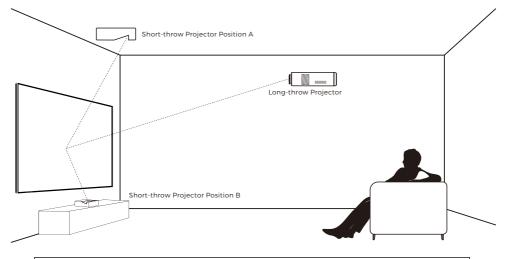

ATTENTION!! WHEN YOU SEE A "MARNING SIGN" BE SURE TO HEED THE MESSAGE!

TO THE OWNER

Thank you for purchasing our Fixed Frame screen. Please take a moment to read this manual carefully before assembly and installation.

DIRECTIONS

- 1) Due to the batch divergence, please refer to the actual product configuration.
- 2) The indication is for reference only, and the actual size is subject to the actual product.
- 3) Wear gloves when handling the material. Carefully unroll the screen material out onto a clean floor. Take care to not bend or crease the screen material.
- 4) It is strongly recommended that the screws be screwed into the wall studs where possible. If the wall studs cannot be used, wall anchors must be used.
- 5) Select a location that is not susceptible to moisture, dust, and is away from high traffic locations.
- 6)Please note accessories will be slightly different because of the different fabrics





SCREEN CARE

WARNING!

Do not touch the screen directly with your hand, skin grease will cause damage to the screen coating. Avoid sharp objects from directly touching the screen surface to avoid puncturing or scratching the screen surface.- Do not use acetone, benzene, alcohol, etc. to clean the screen with organic solvents, which will cause permanent damage to the screen.

Avoid scratching the screen surface, which will cause irreparable damage

Short-throw Fabric:

For general dust, use a soft brush to clean the screen surface.

Use soft cloth to dip with mild soapy liquid or neutral detergent.

Rough object or cloth may damage the screen surface.

Screen surface has optical textures, please wipe the horizontal direction when cleaning the fabric; do not wipe it vertical direction or revolve.

Wet cleaning: with a soft towel moistened with water or diluted detergent (Do not use alcohol).Compressed gas duster is recommend.

Acoustically Transparent Fabric:

Compressed gas duster is recommend.

Dust off the screen with a dry rag. Do not use wet cloth, detergent, etc. to wipe the dust on the curtain surface.

Long-throw Fabric:

Surface can be cleaned as follows:

1.Using a white clean cloth(100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circulate motion. Using a fry 100% cotton cloth ,wipe dry after each cleaning and before folding and storing.

2.To clean a stubborn stain or sticky surface, use denatured alcohol(methanol or methyl alcohol) following he same procedure as for water.

OR.

1. Lint-Free white cloths, Mild Soap (hand soap is suitable) and Water.

2. Take the Lint-Free cloth and submerge it in warm water for cleaning light dust and dirt. For stubborn stains or a sticky surface, a solution of mild dishwashing liquid diluted with warm water should be used.

3. Completely ring out the cloth so it is lightly dampened, not drenched.

4. Using the damp cloth, lightly wipe in an up and down motion starting at the left of the screen moving to the right of the


screen. DO NOT WIPE IN CIRCULAR MOTION.

5. Once you have completed wiping the entire screen with a dampened Lint-Free cloth, use the dry Lint-Free cloth to wipe off any excess water from the screen.

Standard Fabric:

Using a white clean cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. Using a dry 100% cotton cloth, wipe dry after each cleaning session. To clean a stubborn stain or a sticky surface, use denatured alcohol (methanol or methyl alcohol) following the same procedure as for water.



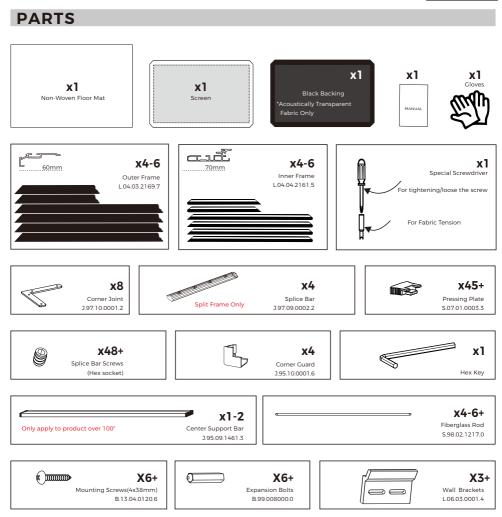


Additional Tools





Please make sure all parts are included in your package before assembling your screen.



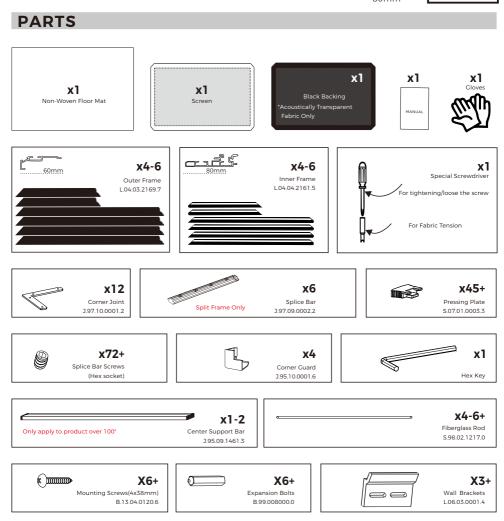

Additional Tools







Please make sure all parts are included in your package before assembling your screen.

FRAME ASSEMBLY

INNER

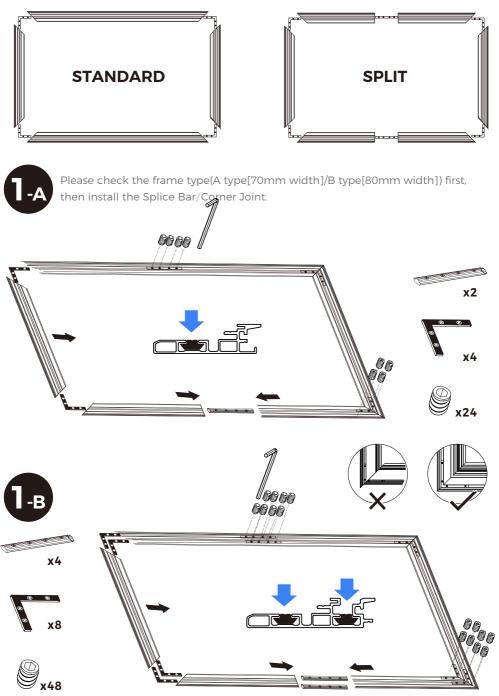




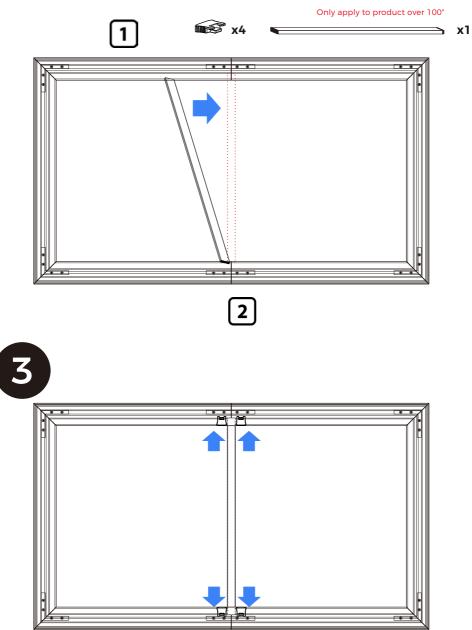


BLACK BACKER ATTACHMENT



Acoustically Transparent materials come with a black backer that must be installed to eliminate shine through. Attach the light-absorbing black velvet fabric onto the Hook(frame)

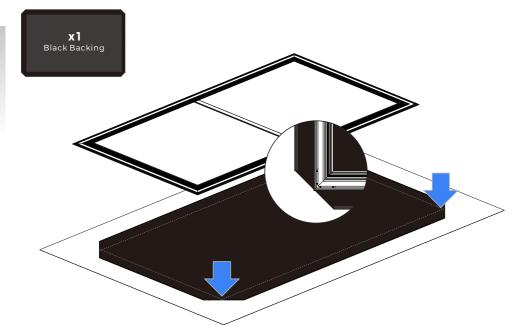

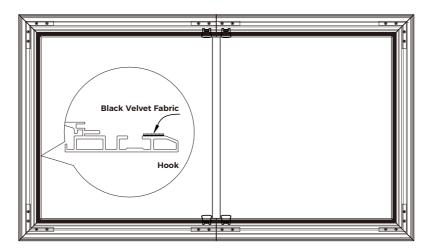

FABRIC ATTACHMENT

<i>[</i>	 	
	Screen	

 \triangle

Wear gloves when handling material.

E.

Carefully unroll the screen material out onto a clean floor. Take care to not bend or crease the screen material.

х1

x4-6




Please make sure keep the front(projection side) of the material face down when unrolling the screen material out onto the Non-woven floor mat.

ATTENTION: There are also has labels on the screen material to help distinguish the correct direction.




Insert the Fiberglass Rod separately into the edges of all four corners of the material.

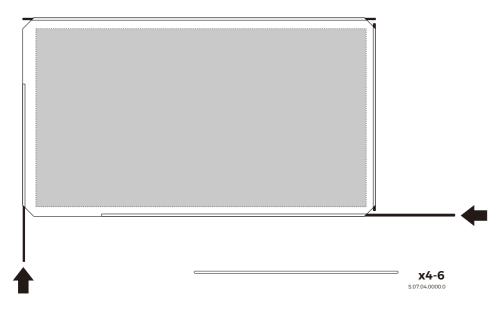



Lay the screen material(screen projection side facing down) under the frame. Place the assembled inner frame into the material as below.

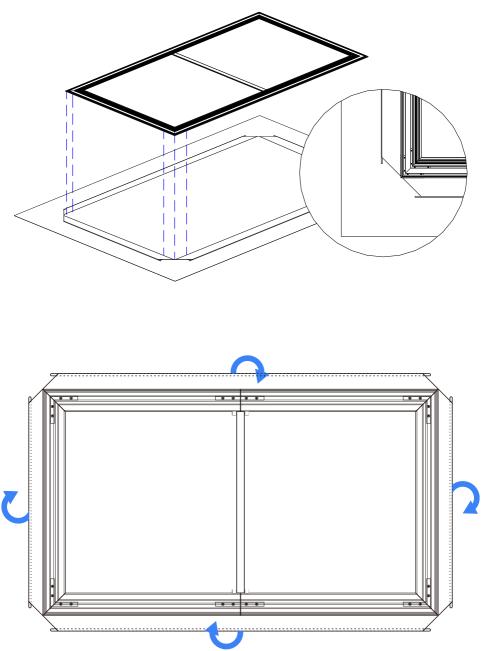






Stretch the Fiberglass Rod in the direction of the arrowhead, then use the Pressing Plate fix screen material in each frame corner $(1 \rightarrow 2 \rightarrow 3 \rightarrow 4)$.



 
After all four corners have been attached; please check whether the screen surface is flat. If not, please loosen the pressing plate and pull the fabric tighter.

 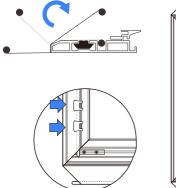


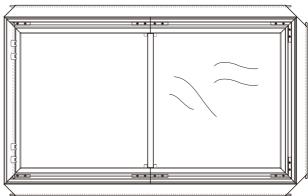


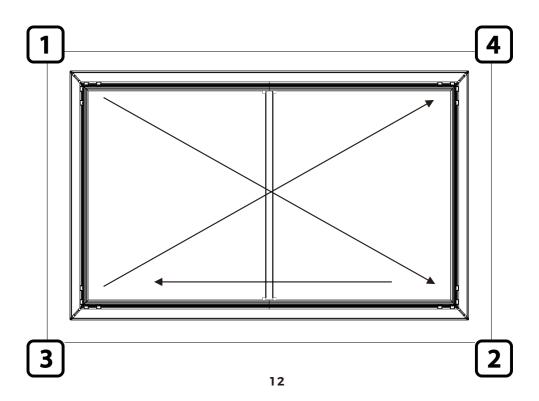










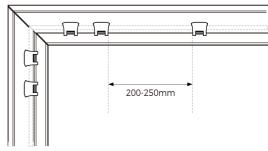

Spacing 200-250/mm apart to prevent crowding. If short on usage, please measuring the fabric and rearrange the layout.

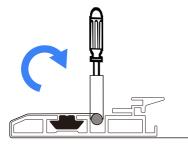


 


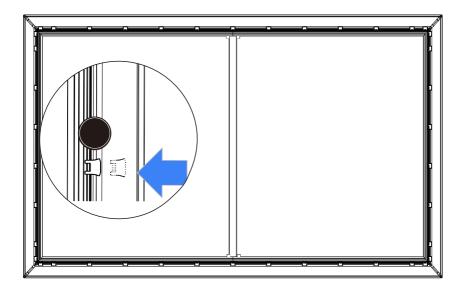





Flip the screen to the front, make sure the screen material is flat. If not, takedown the Pressing Plate and stretch the screen material corner, and reattach.

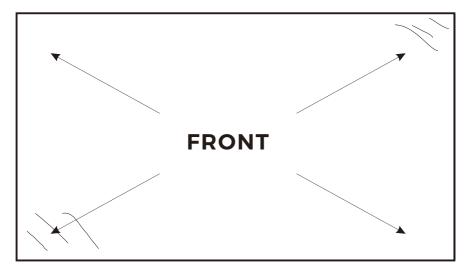


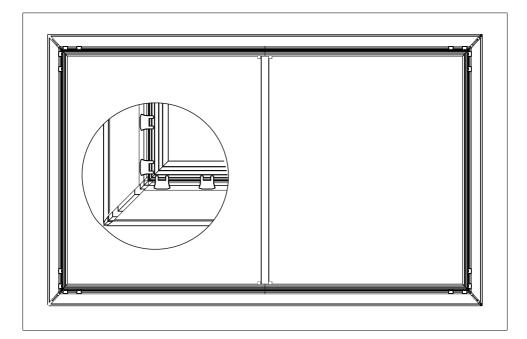


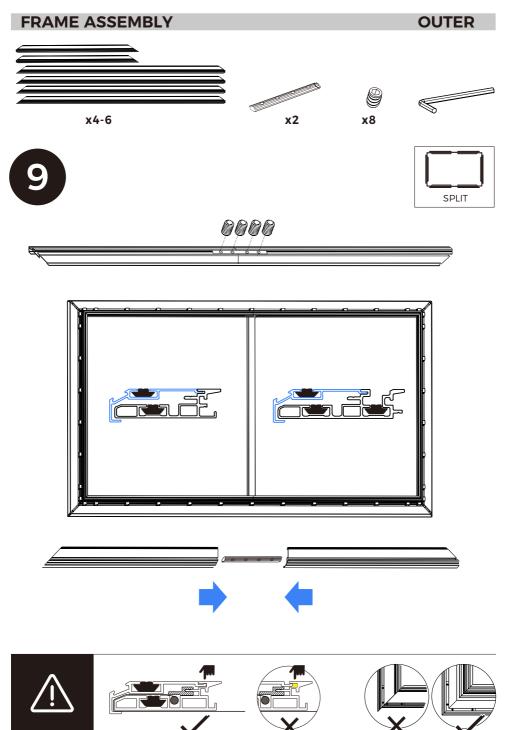


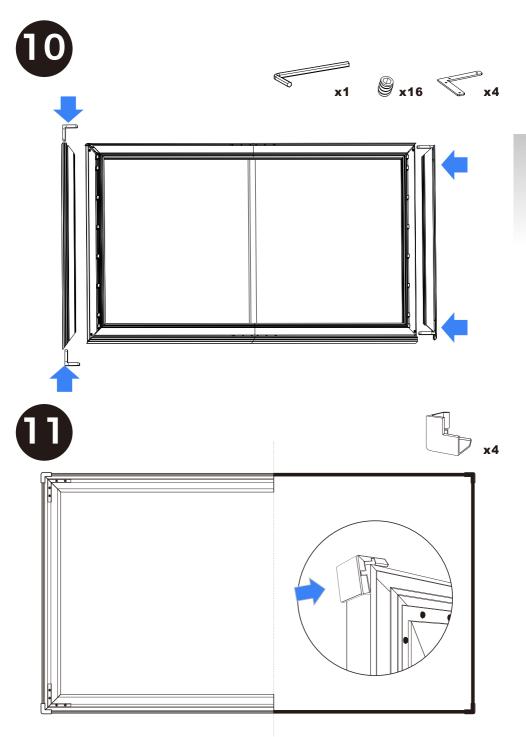

WALL INSTALLATION

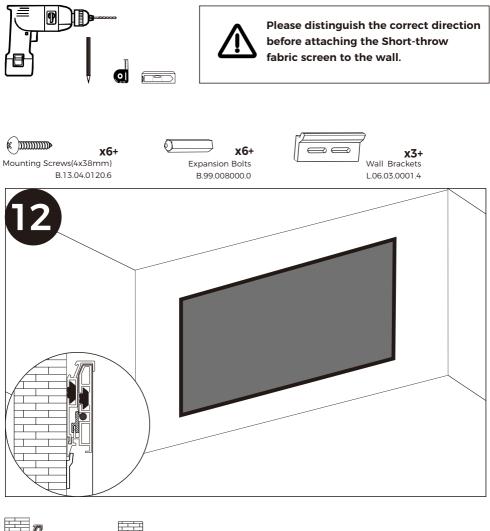

 


 





PARTS

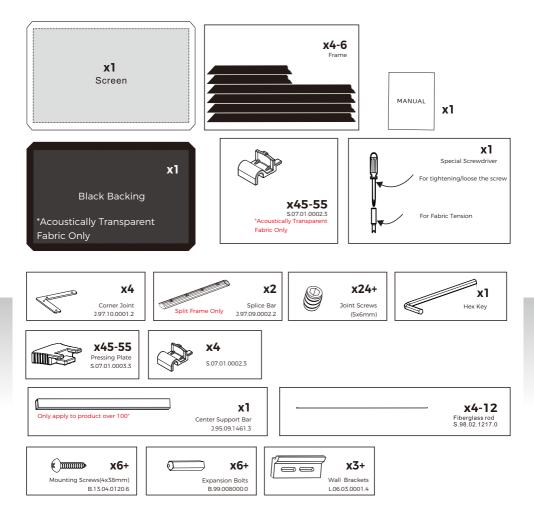

Additional Tools






ATTENTION

Please make sure all parts are included in your package before assembling your screen.



PARTS

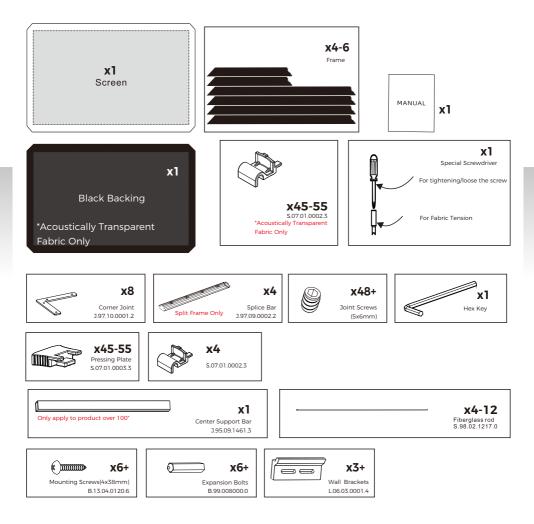

Additional Tools







ATTENTION

Please make sure all parts are included in your package before assembling your screen.

 
FRAME ASSEMBLY

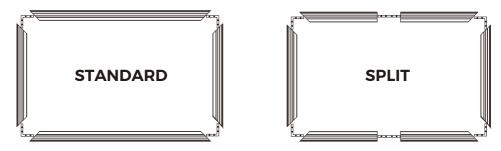

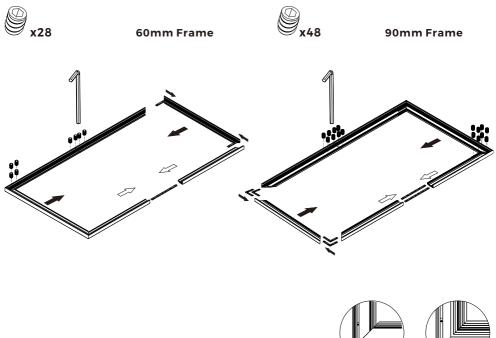











FABRIC ATTACHMENT

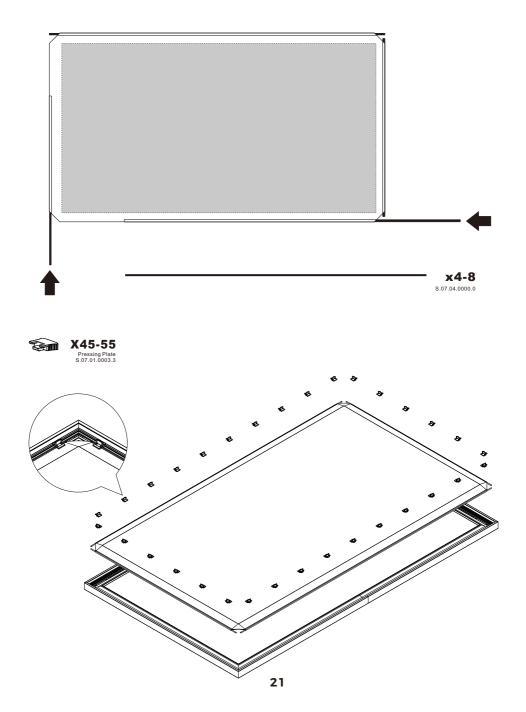




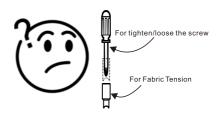

 

 

Spacing 200-250/mm apart to prevent crowding. If short on usage, please measuring the fabric and rearrange the layout.

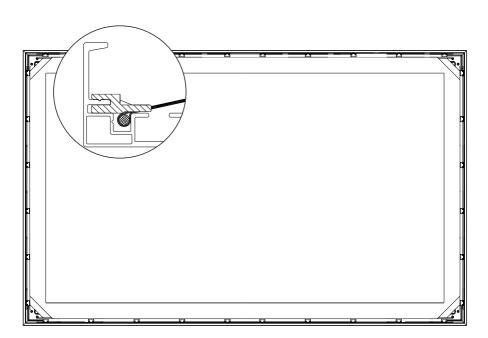




BLACK BACKER ATTACHMENT







x30+ S.07.01.0002.3

_____X4-8

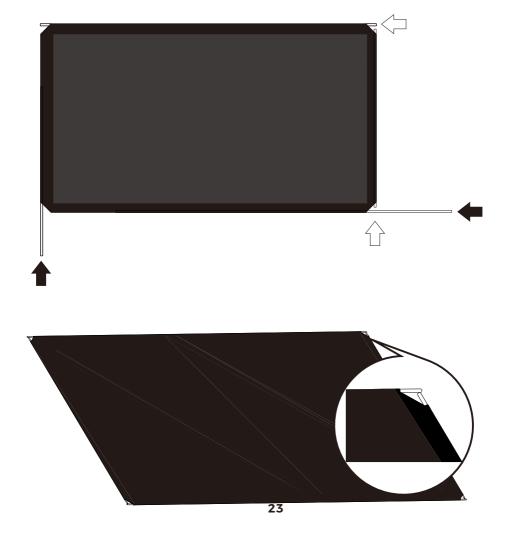


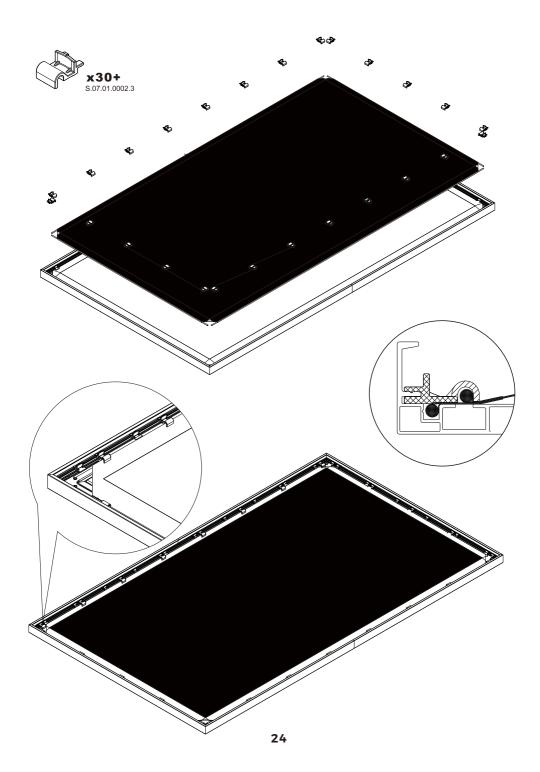


SUPPORT BAR INSTALLATION

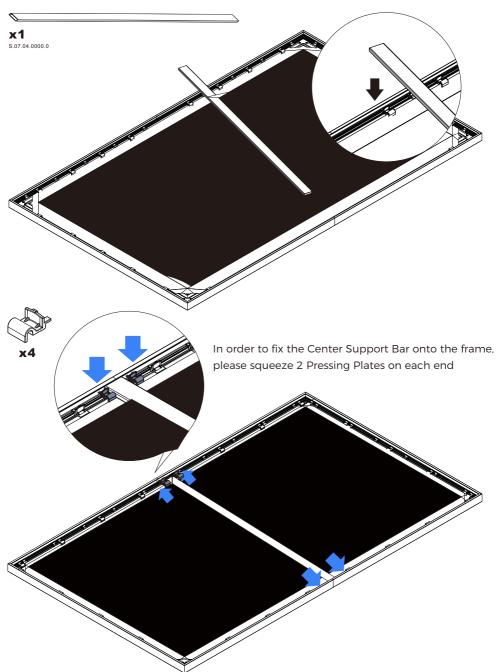

WALL INSTALLATION

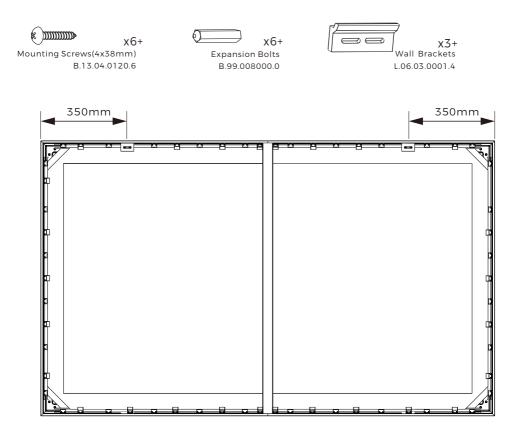

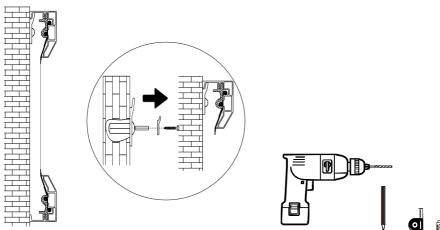

23419.